Instruction Manual

Extension Handle

- For use with American Gardener Clip&Shear™ (900054) or 4-inch Grass Shear (900056)

Part No. 900055

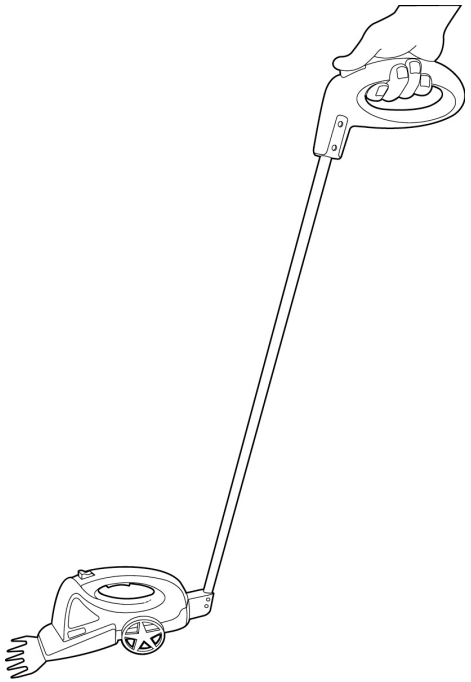

CAUTION: Before using this product, read this manual and follow all its Safety Rules and Operating Instructions.

American Gardener, Duluth, GA 30096
(800) 637-2867 - American-Gardener.com

Full Two Year Warranty Extension Handle

If this Extension Handle fails due to a defect in material or workmanship within two years from the date of purchase, American Gardener, at its sole discretion, will repair or replace the unit free of charge. Proof of purchase is required to validate the warranty period. This warranty does not cover normal wear items such as blades and batteries. For more specific information on these wear items please refer to the Service section of this manual.

To obtain warranty services or questions please call (800) 637-2867.

This warranty applies only while this Extension Handle is used in the United States.

READ ALL INSTRUCTIONS

ASSEMBLY – Put the two ends of the shaft together by depressing the spring buttons and locking them into the holes.

USE – This extension handle should only be used with the American Gardener Shears (900054, 900056). To attach a shear to the Extension Handle, line up the grooves on the shear with the tracks and slide unit in until it locks. To release the shear depress the button on the bottom to release locking tab and slide unit forward.

To Operate The Trigger Switch:

1. **To turn tool ON** slide the safety switch on top of the handle FORWARD with your thumb. Hold it FORWARD momentarily, while squeezing the trigger switch (located under the handle).
2. The trigger has been designed so it is easy to hold in the ON position during clipping. The safety switch may be released after the trigger switch is ON.
3. To turn tool OFF, merely release the trigger. The locking button will snap backward and prevent the trigger switch from being accidentally depressed.

DON'T OVERREACH – Maintain proper footing and balance at all times.

Garantía total de dos años del Mango de Extensión

Si este Mango de Extensión no funciona debido a un defecto de materiales o de manufactura dentro de dos años de la fecha de compra, American Gardener, a su discreción única, reparará o reemplazará la unidad sin cargo alguno. Se exigirá prueba de compra para validar el período de garantía. Esta garantía no cubre el desgaste normal de piezas tales como las cuchillas o las baterías. Para información más específica acerca de estas piezas que se desgastan por favor vea la sección de Servicio de este manual.

Para servicio de garantía o hacer preguntas llame al (800) 637-2867.

Esta garantía solo aplica mientras este Clip&Shear™ se use dentro de los Estados Unidos de Norteamérica.

Esta garantía le da a usted derechos legales; además, usted podría tener otros derechos, los cuales varían de estado a estado.

LEA TODAS LAS INSTRUCCIONES

MONTAJE – Arme los dos extremos del mango presionando los dos botones de resorte y fijándolos en los huecos.

USO – El mango de extensión debe usarse solamente con las tijeras de American Gardener (900054, 900056). Para conectar las tijeras al Mango de Extensión, alinee las ranuras de las tijeras con las guías y deslice la unidad hasta que se fije. Para liberar las tijeras presione el botón al fondo para soltar el gancho de fijación y deslice la unidad hacia adelante.

Cómo usar el interruptor de gatillo:

4. **Para ENCENDER** la herramienta, deslice HACIA ADELANTE el interruptor de seguridad en la parte superior del mango, usando su pulgar. Sosténgalo HACIA ADELANTE por un momento mientras presiona el gatillo (localizado bajo el mango).
5. El gatillo ha sido diseñado para que sea fácil aguantarlo en la posición ENCENDIDA (ON) mientras recorta. Puede soltar el interruptor de seguridad cuando el gatillo esté en ENCENDIDO.
6. Para APAGAR, simplemente suelte el gatillo. El botón de enganche se tirará hacia atrás y evitará que el gatillo se presione por accidente.

NO SE SOBREEXTIENDA – Siempre manténgase en equilibrio y apoyado.